


AutoHarnessHouse.com – Backup camera Relocation harness

inquiry@autoharnesshouse.com

Installation instructions

- 1) Verify that the vehicle is off.
- 2) Carefully remove the MFD. Find the 8-pin connector and unplug it.
- 3) Connect the black 8-pin connector from the AutoHarnessHouse.com (#1) backup camera relocation harness to the back of the MFD.
- 4) Connect the connector that was unplugged in step 2 to the white (#2) 8-pin connector.

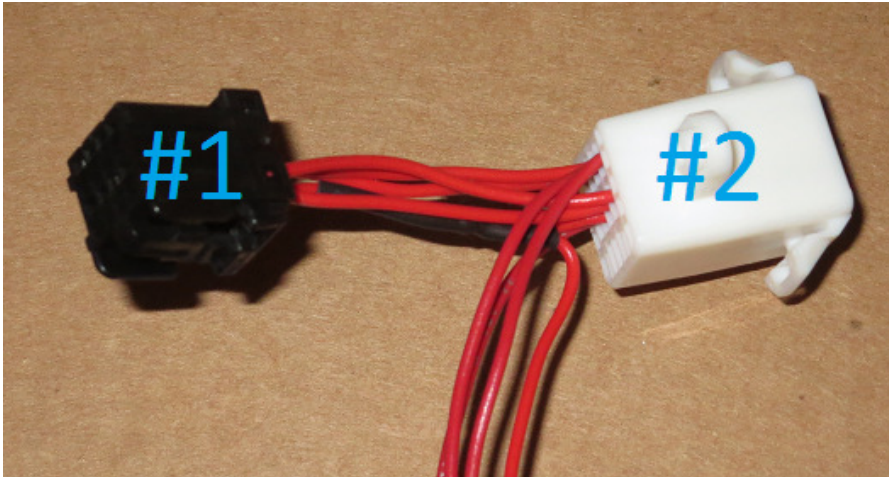

- 5) If not already done, disconnect and slide out the navigation unit.
- 6) Route the other end of the AutoHarnessHouse.com harness to the back of the unit.
- 7) Connect the yellow video connector to the backup camera input on the new, aftermarket headunit.
- 8) Connect the black wire/wiring ring to a metal ground point.
- 9) Connect the purple wire to the reverse signal input on the new headunit. Also connect the purple wire to the reverse signal on the vehicle.
- 10) Reinstall everything and test to verify proper function.

Note: It is best to connect all electrical connections and test prior to final reassembly.

